
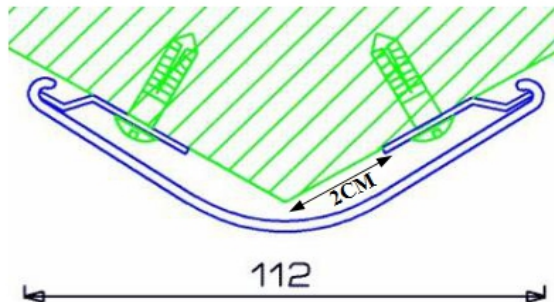


## ASSEMBLY INSTRUCTIONS ZK-R MODEL ZIKONYL

First, we need to position the aluminum parts on the wall vertically, for it will serve us a level, leaving 2 cm separation from the corner, and placing the side with the corner closest to the hole. It should be noted that the holes must not match at the same height as it could damage the corner.

Then, using a marker or similar, we point out areas in the wall to be drilled. Once they are made holes and we have placed all anchors, you have to screw both aluminum parts to the wall.

At this time we take the Zikonyl® and mounted on one side, and pulling it toward the other end, we assemble the plastic on both aluminums.

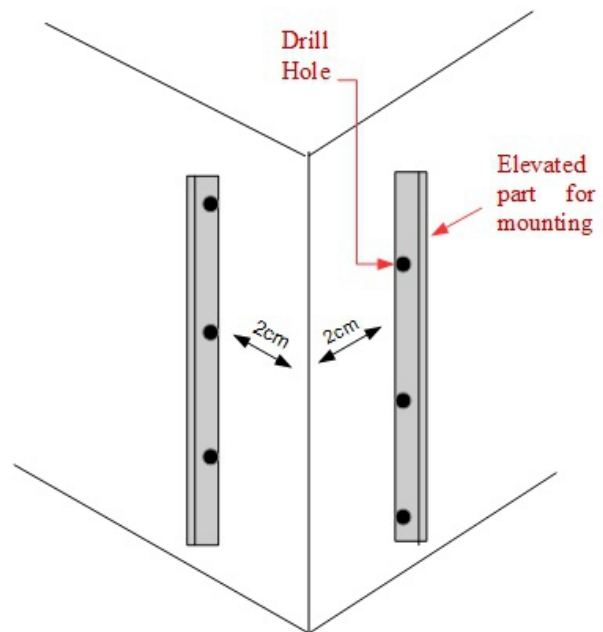

In case of failing to mount proceed to expand the angle of Zikonyl®, you have to apply pressure in the center of the profile in order to expand it's angle, ie the profile will be more open, and so will be easier to mount.



**Zikonyl®**

Ziko Europa S.A. Poligono Industrial Aimayr C/Bronce 12 nave 6, 28330 San Martin de la Vega, Madrid (Spain)  
Phone: +0034 916911206 Fax: +0034 916916799